




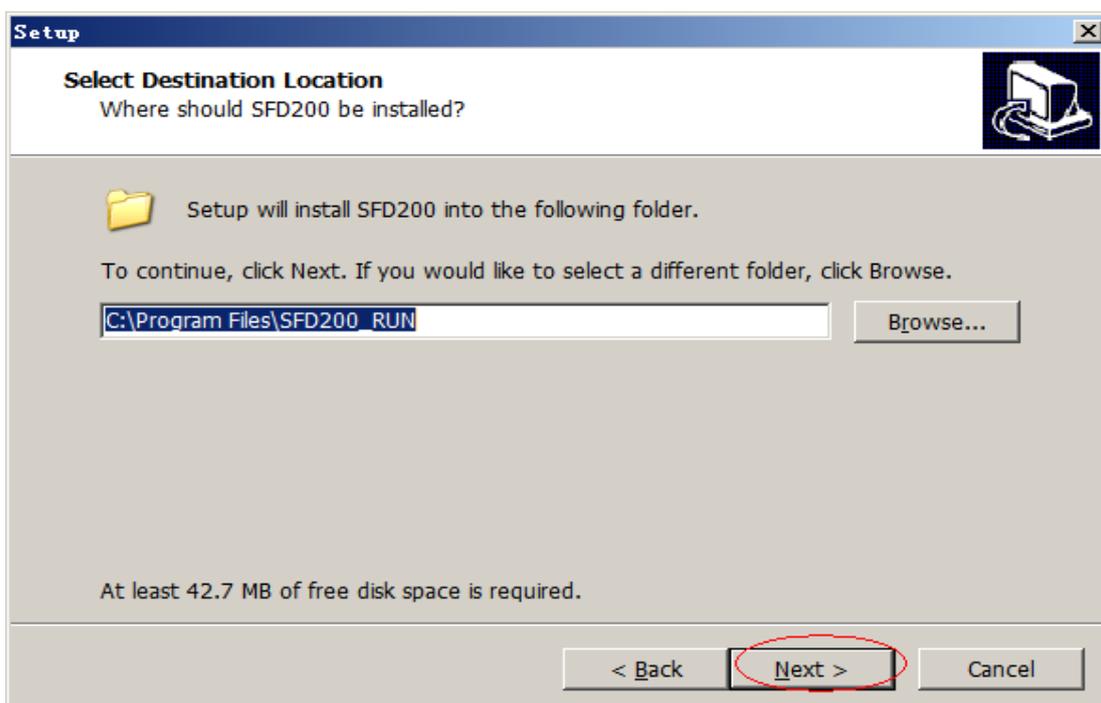




MANUAL ON THE SFD200 SOFTWARE

Install the Software

You should not install any Anti-virus software and any firewall in the computer before installation of the SFD200 Remote Control System.

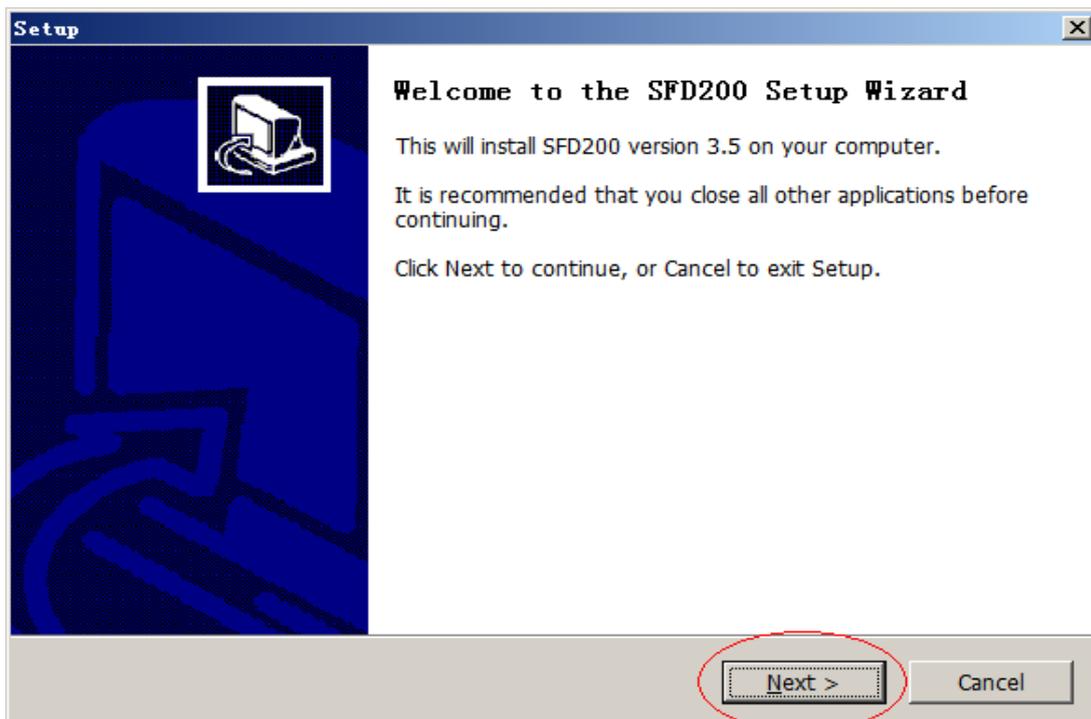


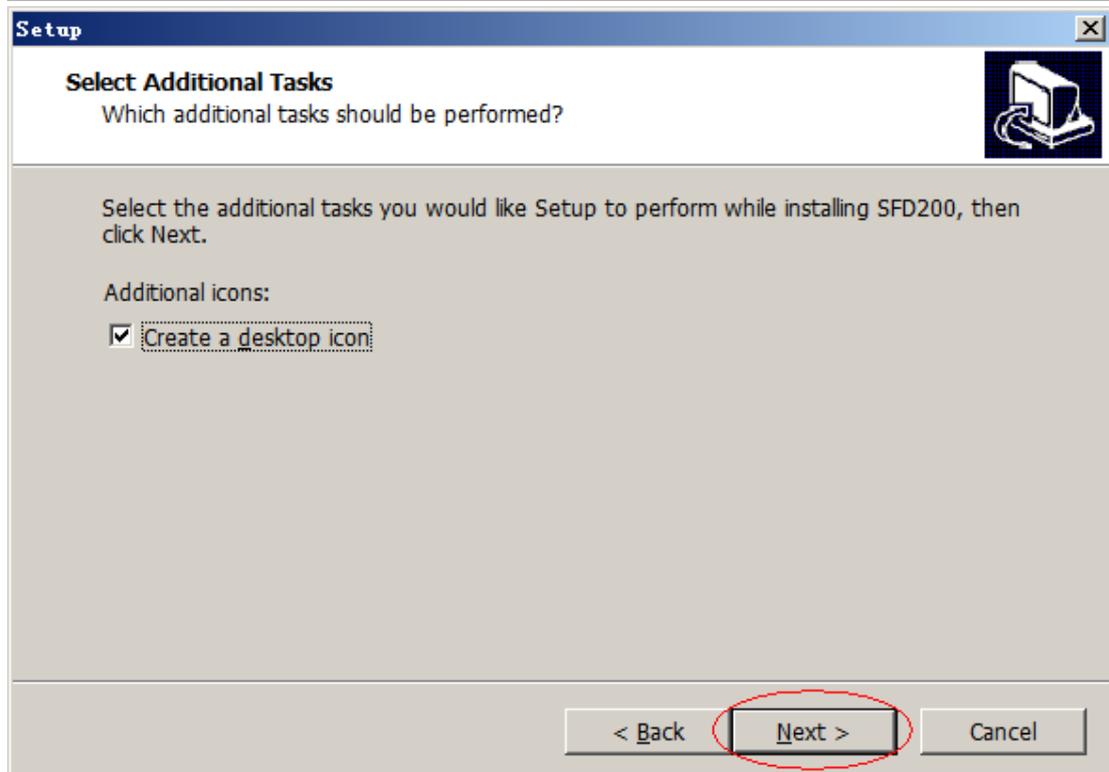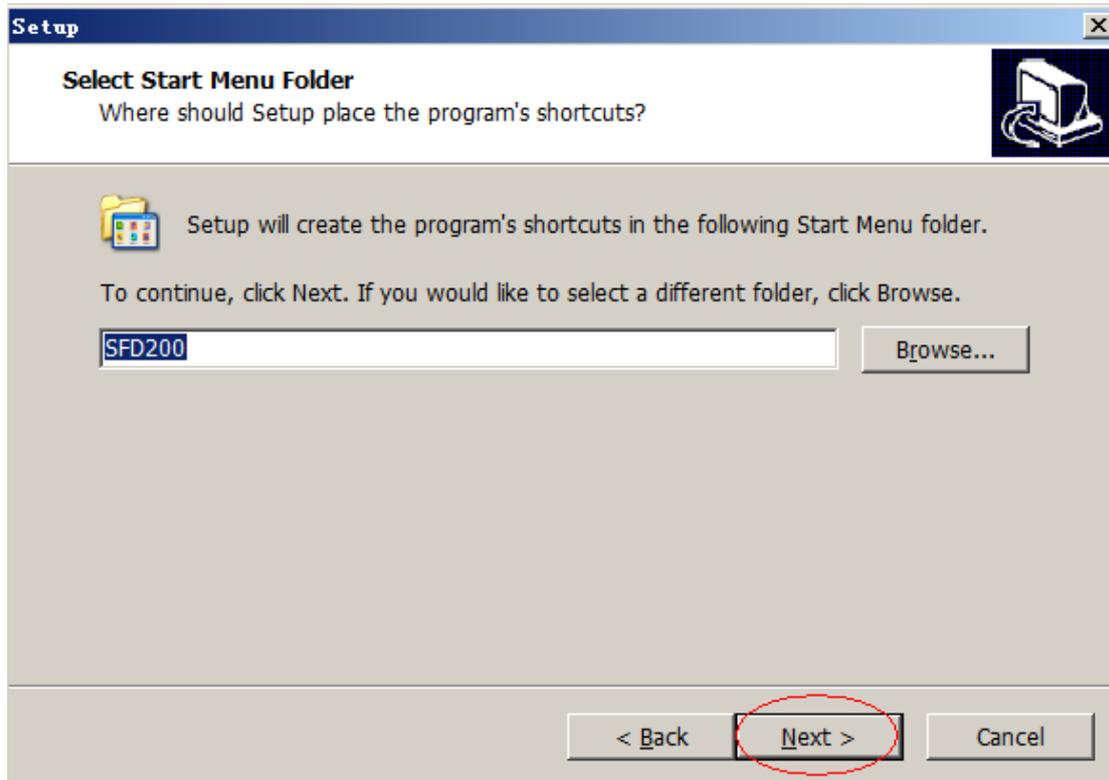

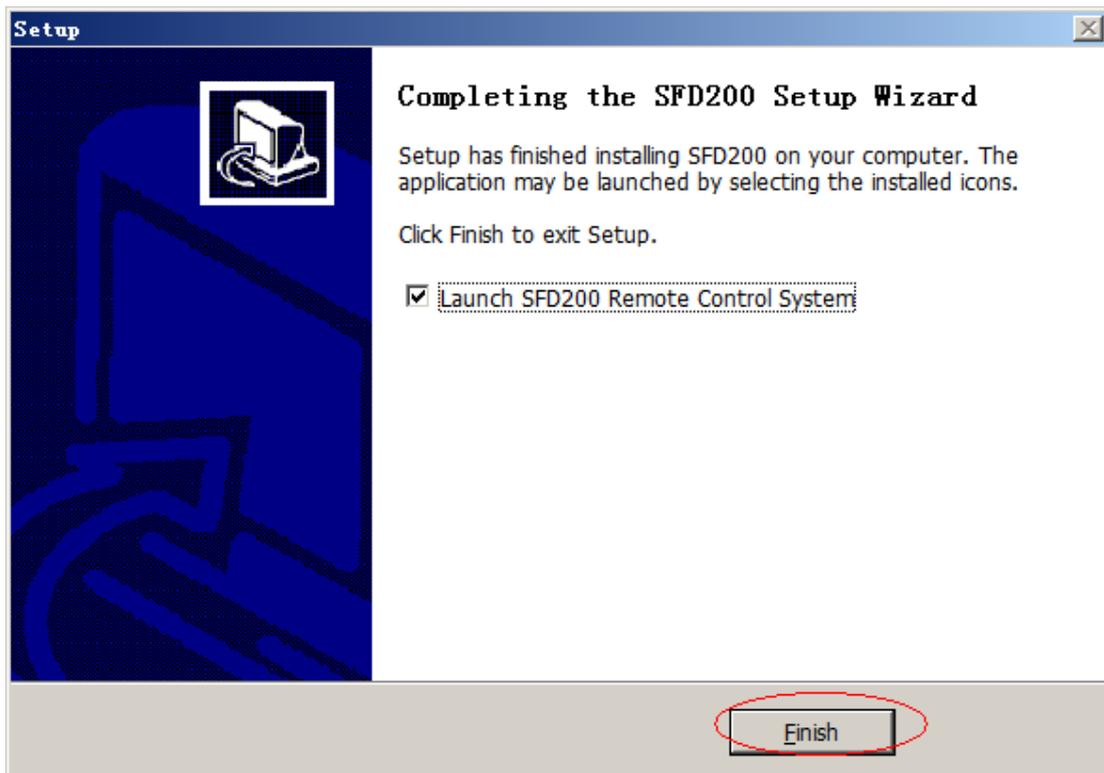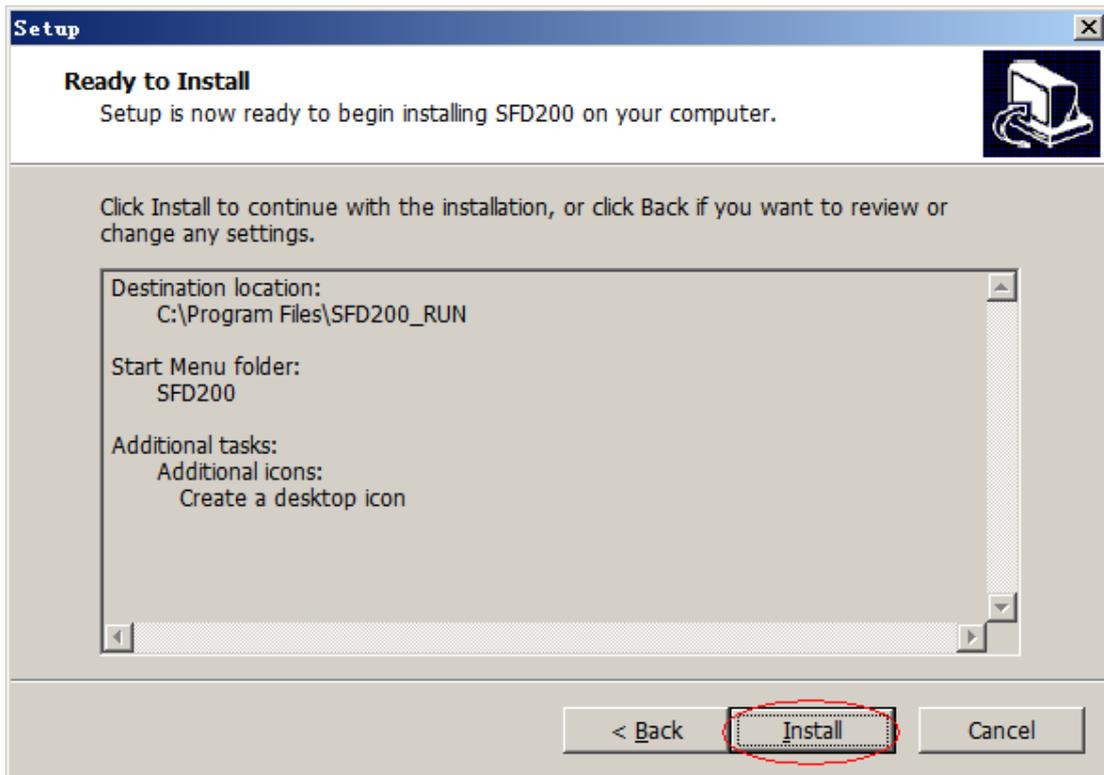

The Picture of the software: Diagram

1. Diagram

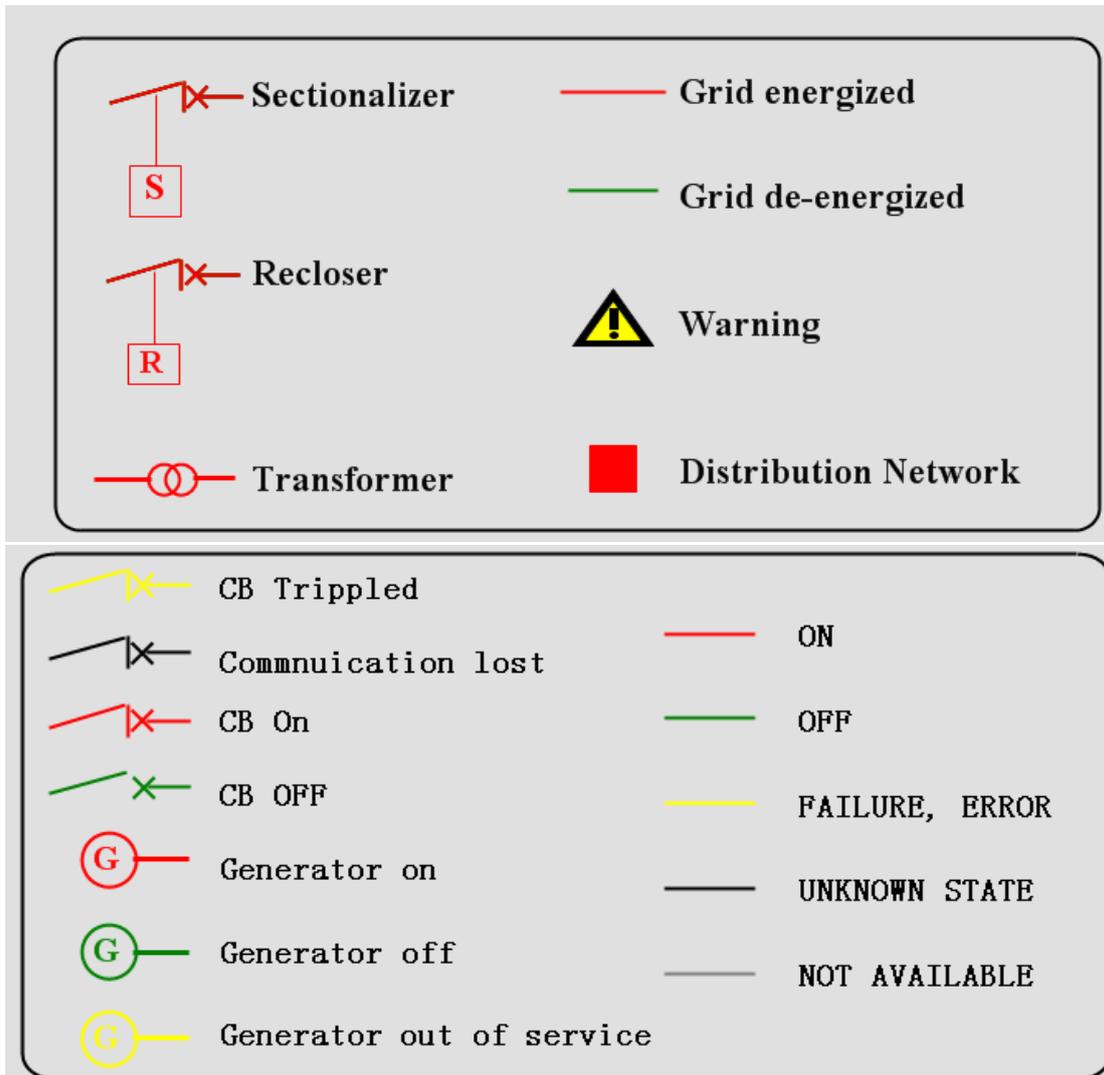

2. Click the next push button, go into the picture of the History Data.



3. The next push button tell us the picture of the computer now is in Dari language, when we click it, the picture of the computer will go to English language.



4. We remain the next push button here, there is no useful now, if the customer require to open it, send to us the message, please!



The Picture of the software: History data

| Station | Load | Status | Command | Location |
|---------|-------------|---|---|----------|
| TF1 | 999999130.3 |  |   | Shorabak |

1. Click the push button of ON or OFF, It means that you will turn on or turn off the MCCB.

2. Status means.

Green: Circuit breaker is off.

Red: Circuit breaker is on.

Black: The GPRS communication of this station failure.

Yellow: The MCCB of this station failure.

3. Click the push button  , you will go to the next Picture, you can read each KWH meter.




| Station | KW | KVA | KWH |
|---------|-----|-----|-----|
| TF1 | 0.0 | 0.0 | 0.0 |
| TF2 | 0.0 | 0.0 | 0.0 |
| TF3 | 0.0 | 0.0 | 0.0 |
| TF4 | 0.0 | 0.0 | 0.0 |
| TF5 | 0.0 | 0.0 | 0.0 |
| TF6 | 0.0 | 0.0 | 0.0 |
| TF7 | 0.0 | 0.0 | 0.0 |
| TF8 | 0.0 | 0.0 | 0.0 |
| TF9 | 0.0 | 0.0 | 0.0 |
| TF10 | 0.0 | 0.0 | 0.0 |
| TF11 | 0.0 | 0.0 | 0.0 |
| TF12 | 0.0 | 0.0 | 0.0 |
| TF13 | 0.0 | 0.0 | 0.0 |

| Station | KW | KVA | KWH |
|---------|-----|-----|-----|
| TF14 | 0.0 | 0.0 | 0.0 |
| TF15 | 0.0 | 0.0 | 0.0 |
| TF16 | 0.0 | 0.0 | 0.0 |
| TF17 | 0.0 | 0.0 | 0.0 |
| TF18 | 0.0 | 0.0 | 0.0 |
| TF19 | 0.0 | 0.0 | 0.0 |
| TF20 | 0.0 | 0.0 | 0.0 |
| TF21 | 0.0 | 0.0 | 0.0 |
| TF22 | 0.0 | 0.0 | 0.0 |
| TF23 | 0.0 | 0.0 | 0.0 |
| TF24 | 0.0 | 0.0 | 0.0 |
| TF25 | 0.0 | 0.0 | 0.0 |
| TF26 | 0.0 | 0.0 | 0.0 |

Checking and exporting of the history data:

1. Checking

Click the the push button , you will get the next Query Dialog.

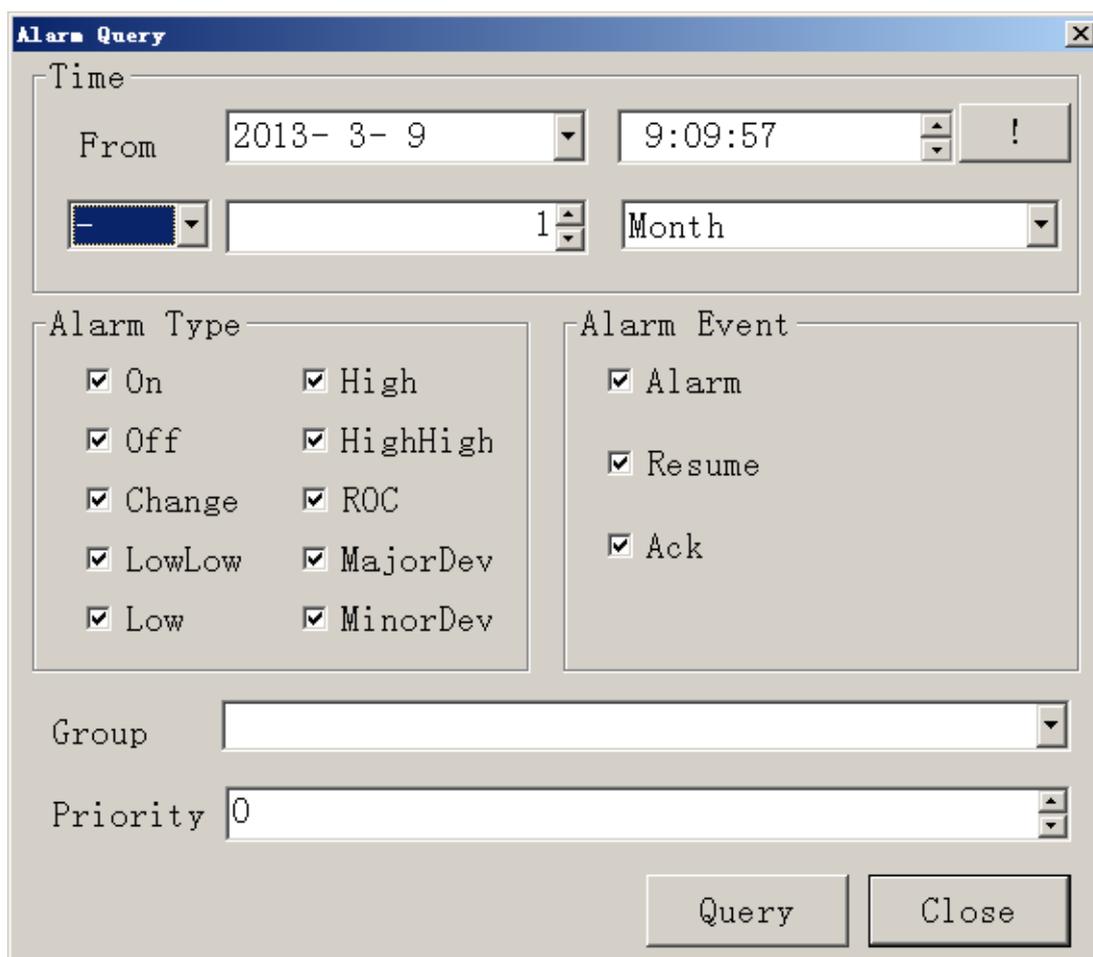

Alarm Query

Time

From 2013- 3- 9 9:09:57 !

- 1 Month

Alarm Type

| | |
|--|--|
| <input checked="" type="checkbox"/> On | <input checked="" type="checkbox"/> High |
| <input checked="" type="checkbox"/> Off | <input checked="" type="checkbox"/> HighHigh |
| <input checked="" type="checkbox"/> Change | <input checked="" type="checkbox"/> ROC |
| <input checked="" type="checkbox"/> LowLow | <input checked="" type="checkbox"/> MajorDev |
| <input checked="" type="checkbox"/> Low | <input checked="" type="checkbox"/> MinorDev |

Alarm Event

- Alarm
- Resume
- Ack

Group

Priority 0

Query Close

You can select the month and the data of your requirement, then you click the push botton “Query” , you will get the result.

1. Exporting.

After checking, click the push botton  , You will get the file of Excel format.



The Picture of Load.

| Station | KW | KVA | KWH |
|---------|-----|-----|-----|
| TF1 | 0.0 | 0.0 | 0.0 |
| TF2 | 0.0 | 0.0 | 0.0 |
| TF3 | 0.0 | 0.0 | 0.0 |
| TF4 | 0.0 | 0.0 | 0.0 |
| TF5 | 0.0 | 0.0 | 0.0 |
| TF6 | 0.0 | 0.0 | 0.0 |
| TF7 | 0.0 | 0.0 | 0.0 |
| TF8 | 0.0 | 0.0 | 0.0 |
| TF9 | 0.0 | 0.0 | 0.0 |
| TF10 | 0.0 | 0.0 | 0.0 |
| TF11 | 0.0 | 0.0 | 0.0 |
| TF12 | 0.0 | 0.0 | 0.0 |
| TF13 | 0.0 | 0.0 | 0.0 |